



AVAILABLE FOR:

CLUB CAR® DS® & PRECEDENT®
E-Z-GO® TXT® & RXV®
YAMAHA® DRIVE® & G14-19, 22

6300 SERIES - MAGNETIC CATCH

TABLE OF CONTENTS:

Step 1 - Install Extrusions

Step 2 - Install Windshield

Aluminum Front Frame Notice

PREPARE CAR FOR INSTALLATION:

Remove the following:

- Factory Windshield
- Rubber Grommets & Hardware (if present)

NOTE: Save original hardware for later use.

IMPORTANT: Do not fully tighten hardware until instructed.
Read through all instructions before beginning installation.


STEP 1

INSTALL EXTRUSIONS


MOUNT EXTRUSIONS TO WINDSHIELD

****Peel Protective Blue Film away from the edges, just enough to fully mount Extrusions****

NOTE: Push Extrusions onto Windshield until fully seated.

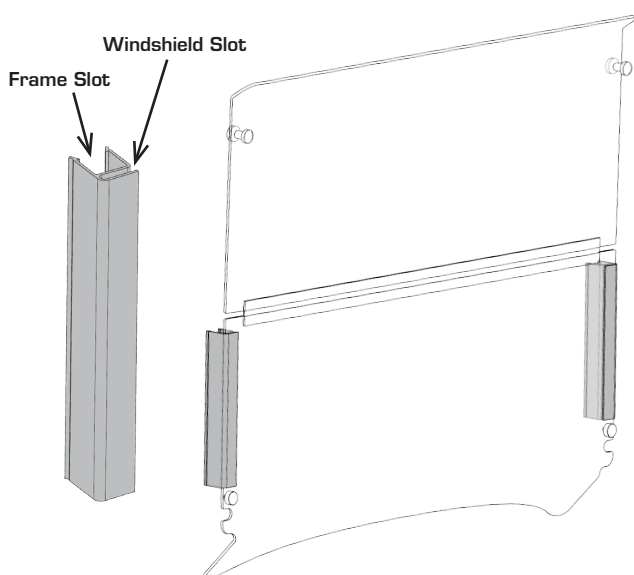

CLUB CAR PRECEDENT / E-Z-GO TXT / YAMAHA DRIVE

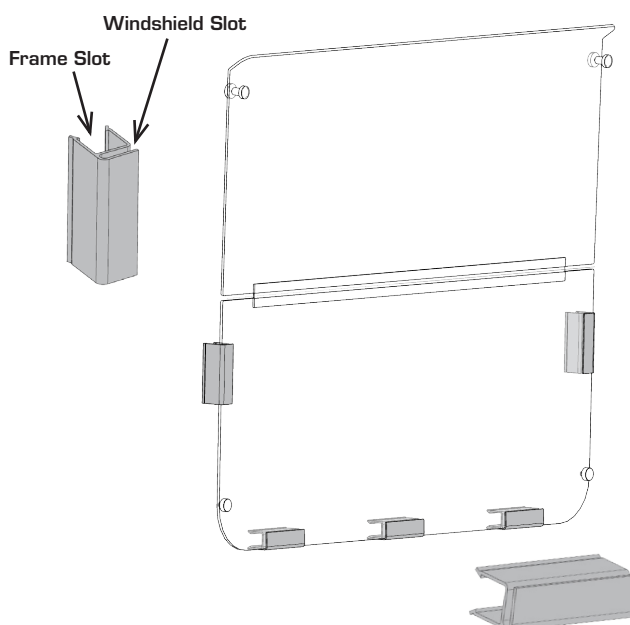


CLUB CAR DS / YAMAHA G14-22

STEP 2

INSTALL WINDSHIELD


MOUNT WINDSHIELD TO FRONT FRAME

NOTE: Fully tighten hardware.


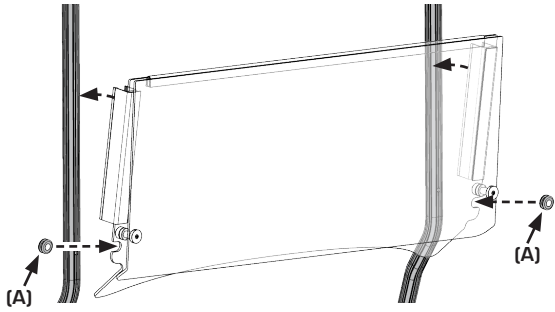


Insert grommets into slots on Windshield, then snap Extrusions & Windshield onto front frame.



CLUB CAR PRECEDENT

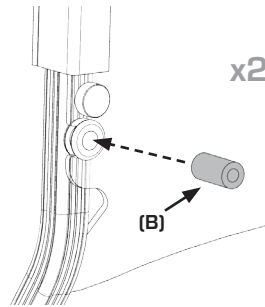


Slide Extrusion & Windshield until grommet aligns with hole in frame, then insert spacer.

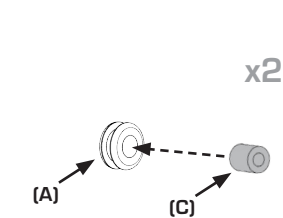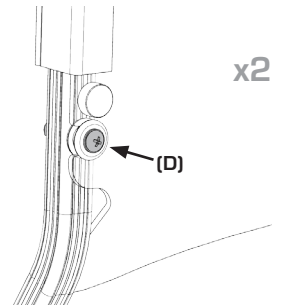

E-Z-GO TXT / YAMAHA DRIVE

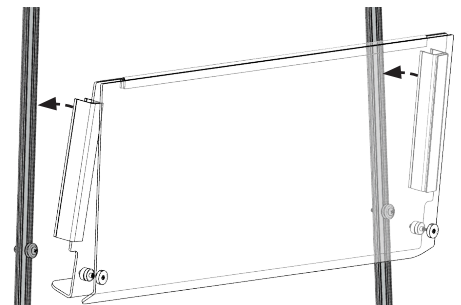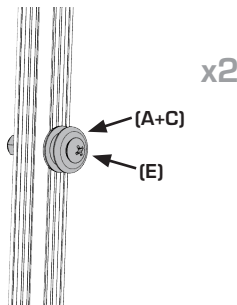

Snap Extrusions & Windshield onto front frame, then slide until Windshield sits on grommet.

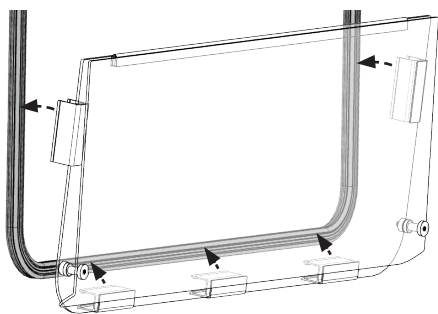

Snap Extrusions & Windshield onto front frame.

CLUB CAR DS / YAMAHA G14-22


HARDWARE - SCALE 1:1

(A) x2

Rubber Grommet


HARDWARE - SCALE 1:1

(B) x2




1-1/2" Spacer

(C) x2




1" Spacer

(D) x2

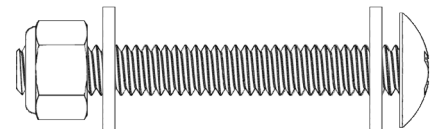

1/4" X 2" Truss Bolt - 1/4" Flat Washer (x2) - 1/4" Nyloc Nut

(E) x2

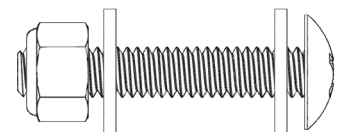

1/4" X 1-1/2" Truss Bolt - 1/4" Flat Washer (x2) - 1/4" Nyloc Nut


NOTICE: ALUMINUM FRONT FRAMES ONLY

UPPER ANGLE KIT REQUIRED

MOUNT UPPER ANGLE TO FRONT FRAME


The magnets will not stick to an aluminum front frame, therefore an Upper Angle Kit is required (sold separately)

NOTE: Fully tighten hardware.

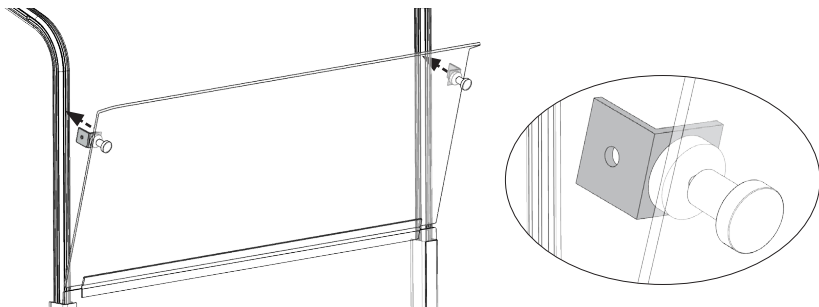

Stick Upper Angles to the magnets and close Windshield to help hold them in place.


ALUMINUM FRONT FRAME

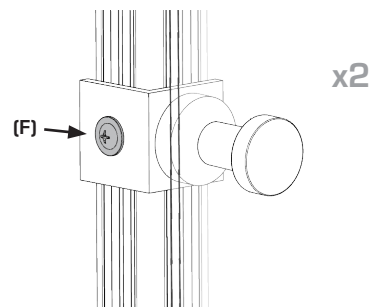

Use self-tapping screw and drill to install upper angle.

HARDWARE - SCALE 1:1

(F) x2



3/4" Self Tapping Screw

THIS PAGE INTENTIONALLY LEFT BLANK